


Retrofitting the opening restrictor in a VELFAC In tilt and turn window



The instruction describes a right hinged element (here seen from outside).

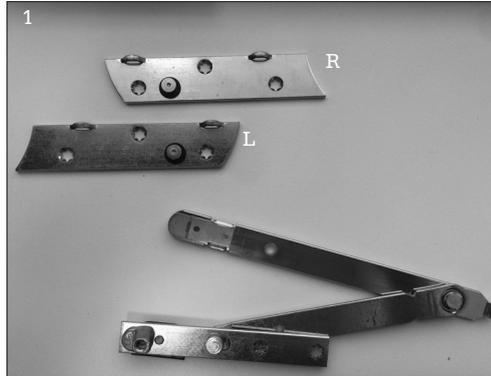

Presentation of the restrictor parts:

The frame parts are marked with R or L to indicate which side they are aimed for (always seen from the hinge side / internal side of the element).


The sash part is neutral, eventually fold 180° where required.



Open the sash sidehung. Click the frame and sash parts together and - at the hinge side of the cill - place the restrictor as show on the picture. When doing so, the retrofitting becomes straight forward.



Underneath the sash, fix the sash part of the restrictor exactly next to the corner hinge hardware (3.5x25).

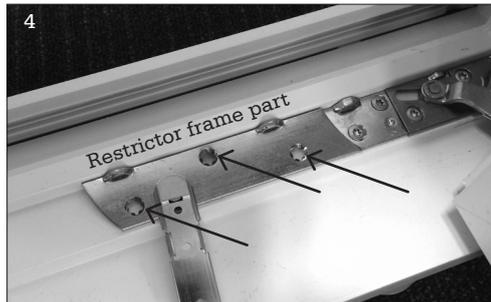

Fix the frame part of the restrictor at the cill as on shown the picture. Remember to pre-drill (3.5x25).